


MANUAL TRANSAXLE LOCATION INDEX [A26M-R]

id05151800500

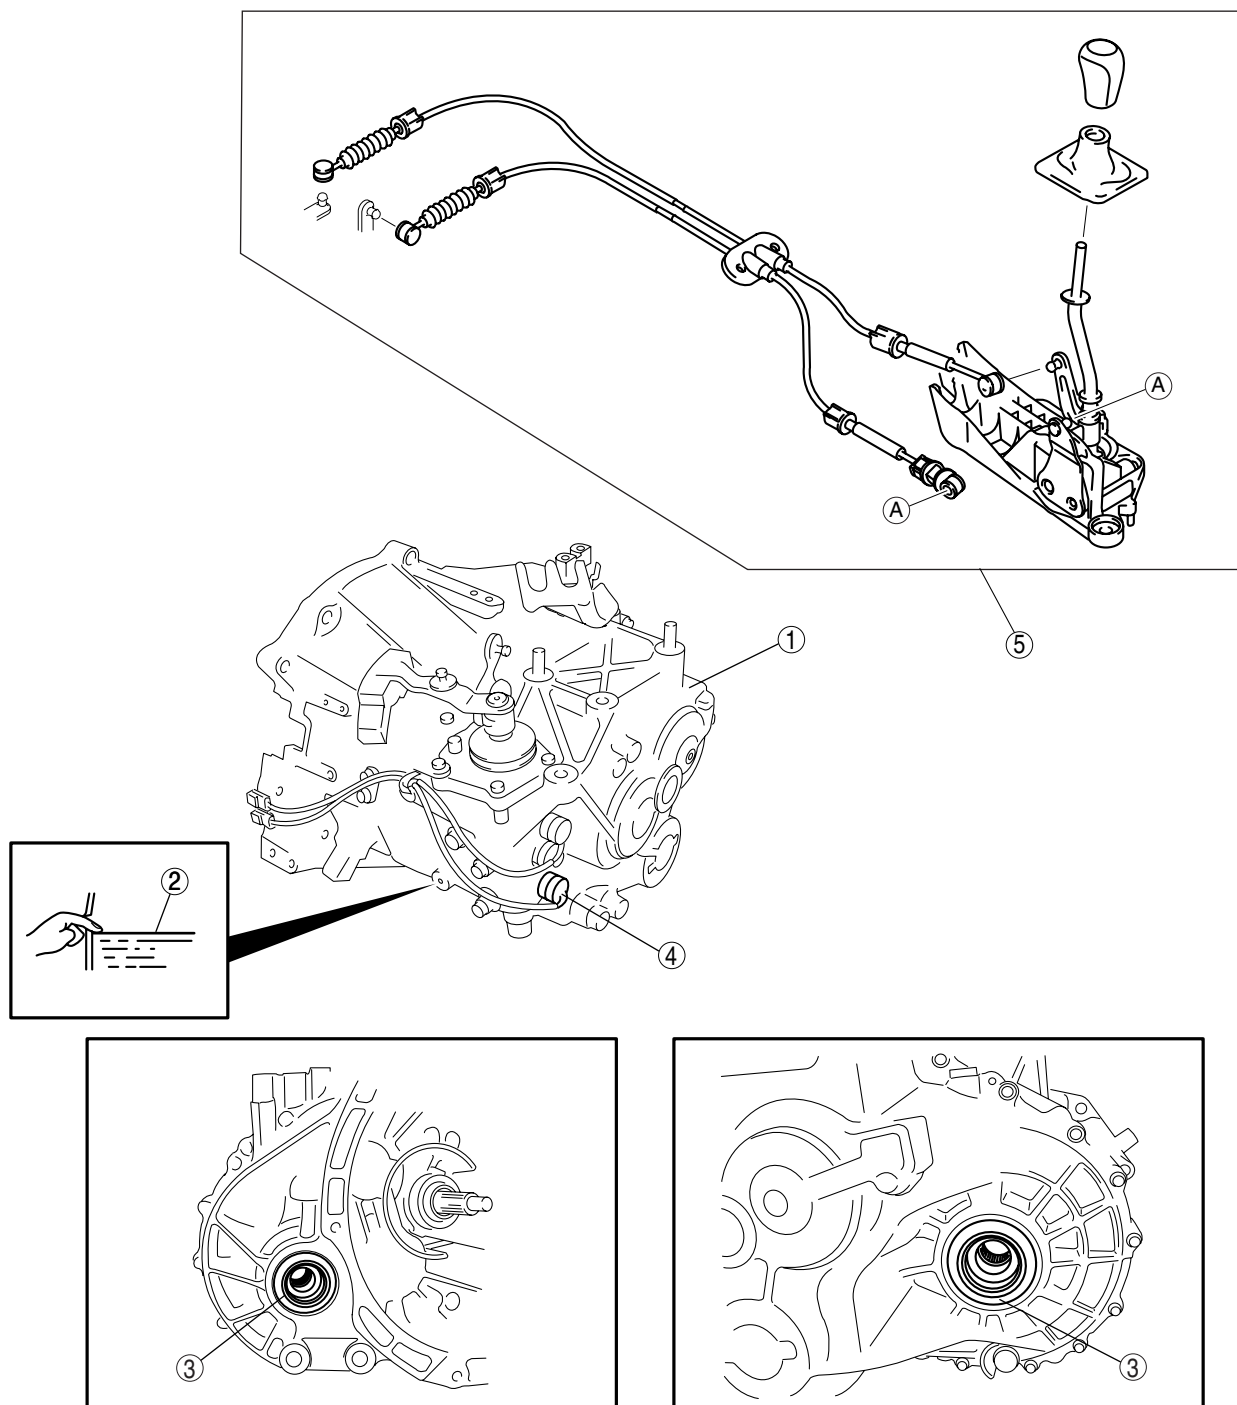

am3zzw00003607

1	Manual transaxle (See MANUAL TRANSAXLE REMOVAL/ INSTALLATION [A26M-R])
2	Transaxle oil (See TRANSAXLE OIL INSPECTION [A26M-R]) (See TRANSAXLE OIL REPLACEMENT [A26M-R])
3	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [A26M-R])

4	Neutral switch (See NEUTRAL SWITCH REMOVAL/ INSTALLATION [A26M-R]) (See NEUTRAL SWITCH INSPECTION [L3 Turbo]) (See NEUTRAL SWITCH INSPECTION [MZR-CD (RF Turbo)])
5	Shift mechanism (See SHIFT MECHANISM REMOVAL/ INSTALLATION [A26M-R])