


FRONT FOG LIGHT REMOVAL/INSTALLATION

id091800802100

4SD

Standard type


1. Disconnect the negative battery cable.
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the headlight cleaner actuator. (vehicles with headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
4. Remove the screws.
5. Remove tabs and then remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

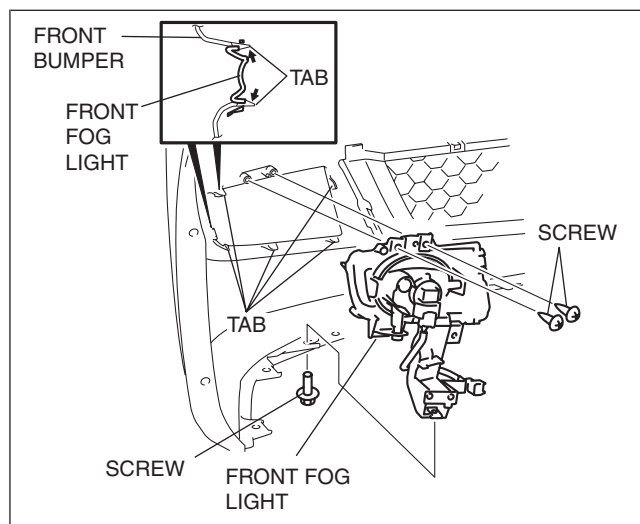

am3zzw00004558

Sport Type

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the headlight cleaner actuator. (vehicles with headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
4. Remove the screws.
5. Remove tabs and then remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

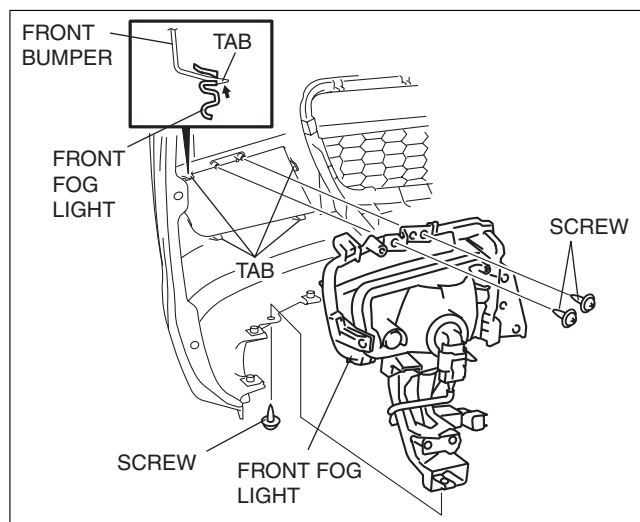


am3zzw00004559

5HB

Standard type

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the headlight cleaner actuator. (vehicles with headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)


4. Remove the screws.
5. Remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

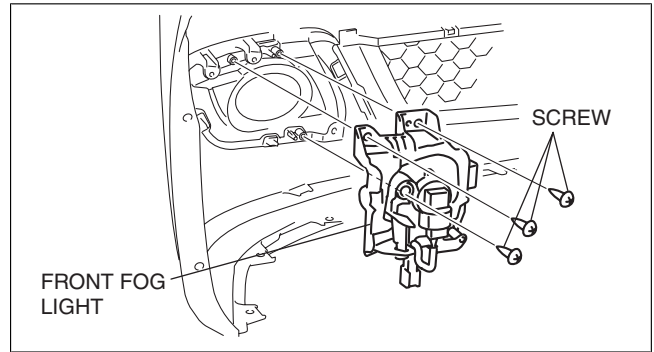

am3zzw00004565

Sport type


1. Disconnect the negative battery cable.
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the headlight cleaner actuator. (vehicles with headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
4. Remove the screws.
5. Remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

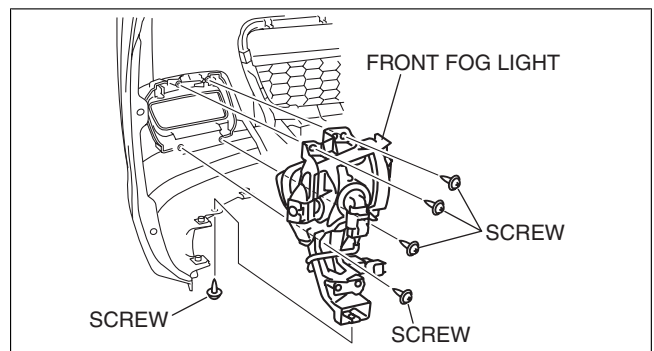

am3zzw00004566

Mazda3 MPS

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the headlight cleaner actuator. (vehicles with headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
4. Remove the screws.
5. Remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

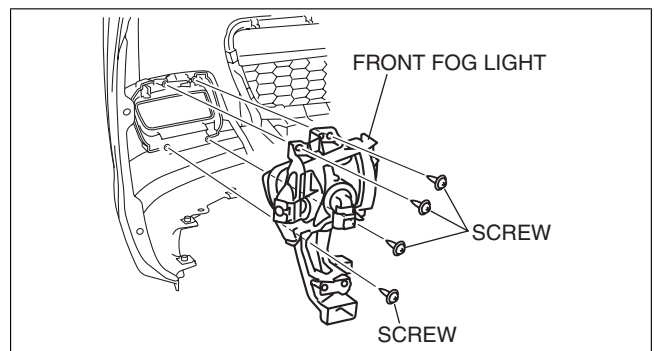

am3zzw00004560