


FRONT BUMPER DISASSEMBLY/ASSEMBLY

id091000800400

4SD (Standard Type)

1. Remove the following parts:
 - (1) Headlight cleaner hose (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
 - (2) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER NOZZLE REMOVAL.) (See HEADLIGHT CLEANER NOZZLE INSTALLATION.)
 - (3) Headlight cleaner actuator (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
 - (4) Front fog lights (Vehicles with the front fog lights) (See FRONT FOG LIGHT REMOVAL/INSTALLATION.)
 - (5) Radiator grille (See RADIATOR GRILLE REMOVAL/INSTALLATION.)
2. Disassemble in the order indicated in the table.

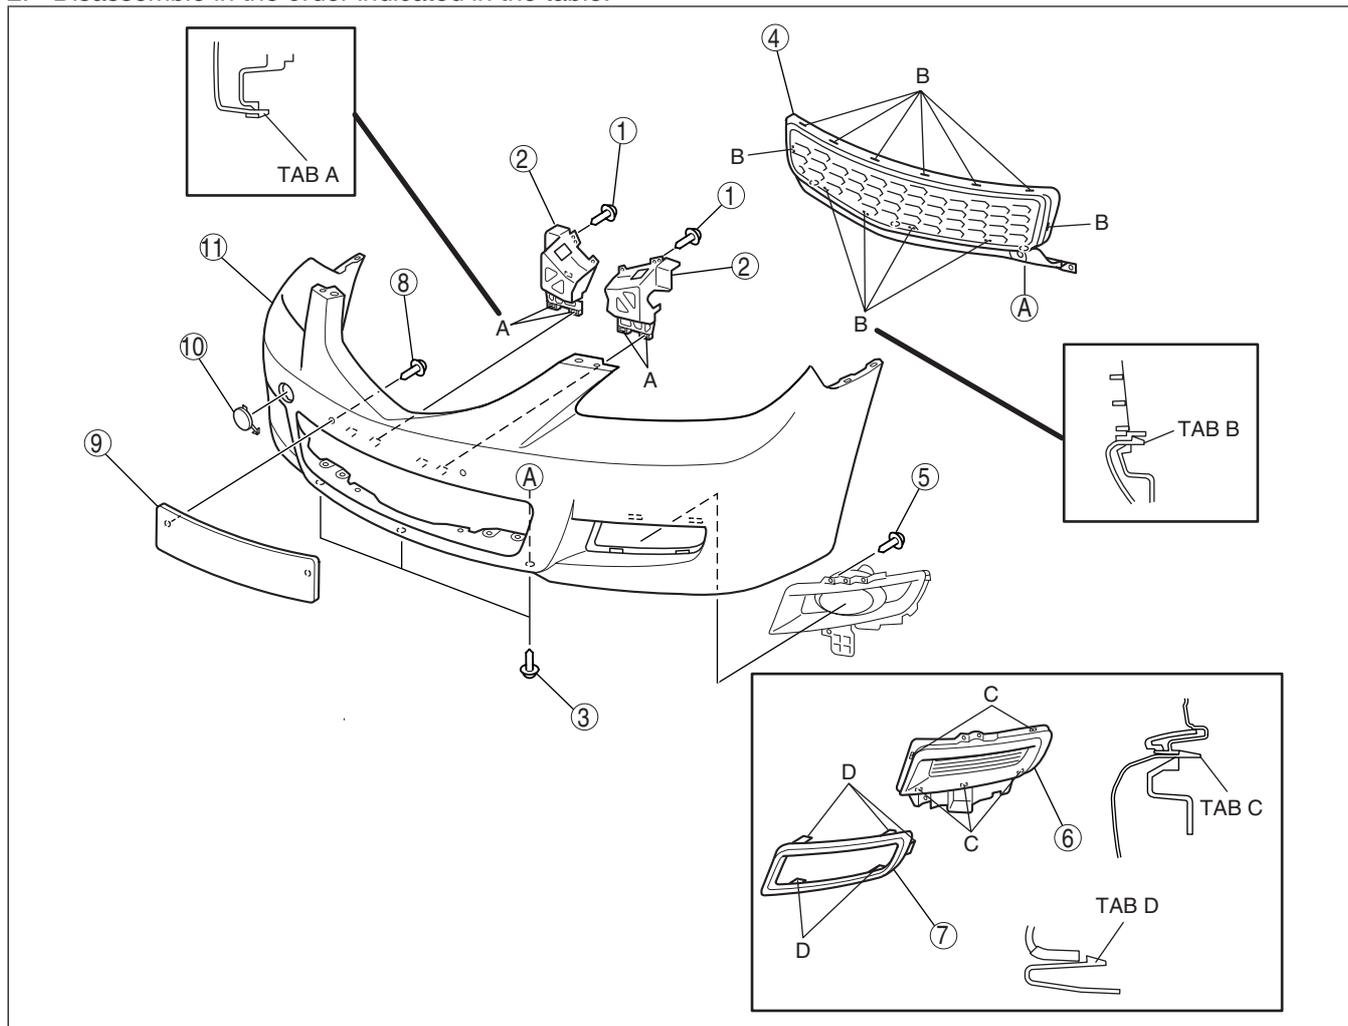


am3zzw00002285

1	Screw A
2	Set plate
3	Screw B
4	Front bumper mesh
5	Screw C
6	Front fog light hole cover A (vehicles without the front fog lights)
7	Front fog light hole cover B (vehicles without the front fog lights)
8	Screw D
9	License plate holder
10	Towing hook cover
11	Front bumper fascia

3. Assemble in the reverse order of disassembly.

4SD (Sports Type)

1. Remove the following parts:
 - (1) Headlight cleaner hose (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
 - (2) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER NOZZLE REMOVAL.) (SeeHEADLIGHT CLEANER NOZZLE INSTALLATION.)
 - (3) Headlight cleaner actuator (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
 - (4) Front fog lights (SeeFRONT FOG LIGHT REMOVAL/INSTALLATION.)
 - (5) Radiator grille (SeeRADIATOR GRILLE REMOVAL/INSTALLATION.)
2. Disassemble in the order indicated in the table.

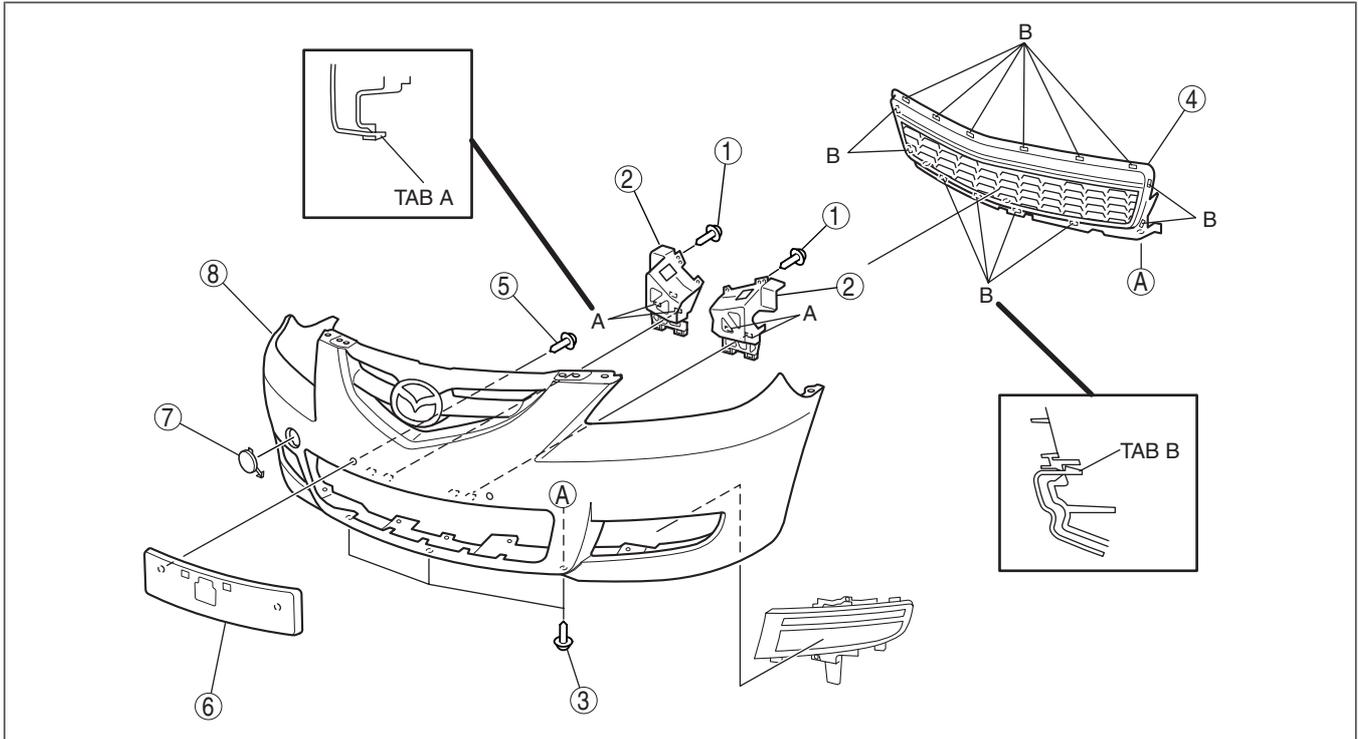

am3zzw00002286


1	Screw A
2	Set plate
3	Screw B
4	Front bumper mesh
5	Screw C
6	License plate holder
7	Towing hook cover
8	Front bumper fascia

3. Assemble in the reverse order of disassembly.

5HB (Standard Type)

1. Remove the following parts:
 - (1) Headlight cleaner hose (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
 - (2) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER NOZZLE REMOVAL.) (SeeHEADLIGHT CLEANER NOZZLE INSTALLATION.)
 - (3) Headlight cleaner actuator (Vehicles with the headlight cleaner) (SeeHEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
 - (4) Front fog lights (Vehicles with the front fog lights) (SeeFRONT FOG LIGHT REMOVAL/INSTALLATION.)

2. Disassemble in the order indicated in the table.

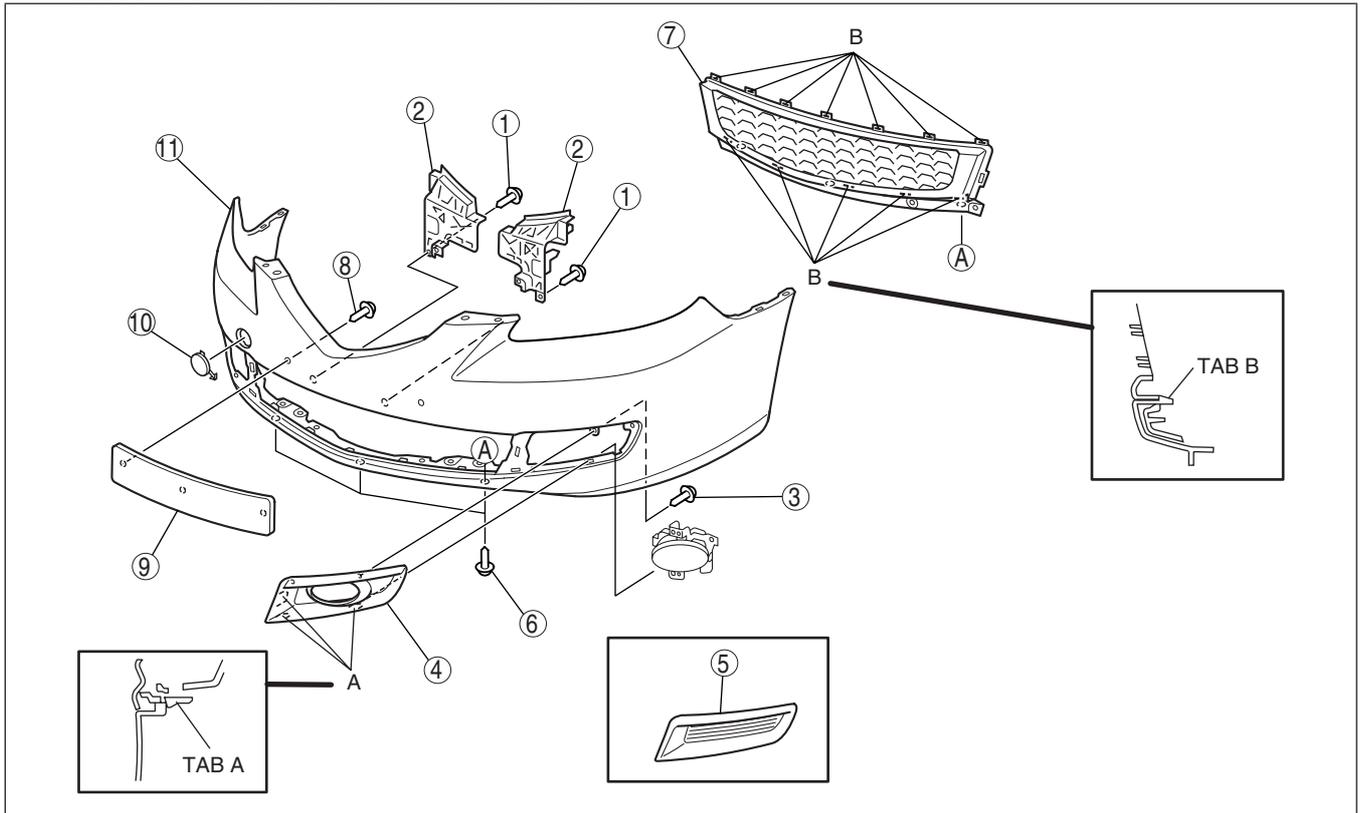

am3zzw00002287

1	Screw A
2	Set plate
3	Screw B
4	Front fog light cover (vehicles with the front fog lights)
5	Front fog light hole cover (vehicles without the front fog lights)
6	Screw C
7	Front bumper mesh
8	Screw D
9	License plate holder
10	Towing hook cover
11	Front bumper fascia


3. Assemble in the reverse order of disassembly.

5HB (Sports Type)

1. Remove the following parts:

- (1) Headlight cleaner hose (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
- (2) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER NOZZLE REMOVAL.) (See HEADLIGHT CLEANER NOZZLE INSTALLATION.)
- (3) Headlight cleaner actuator (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
- (4) Front fog lights (See FRONT FOG LIGHT REMOVAL/INSTALLATION.)

2. Disassemble in the order indicated in the table.

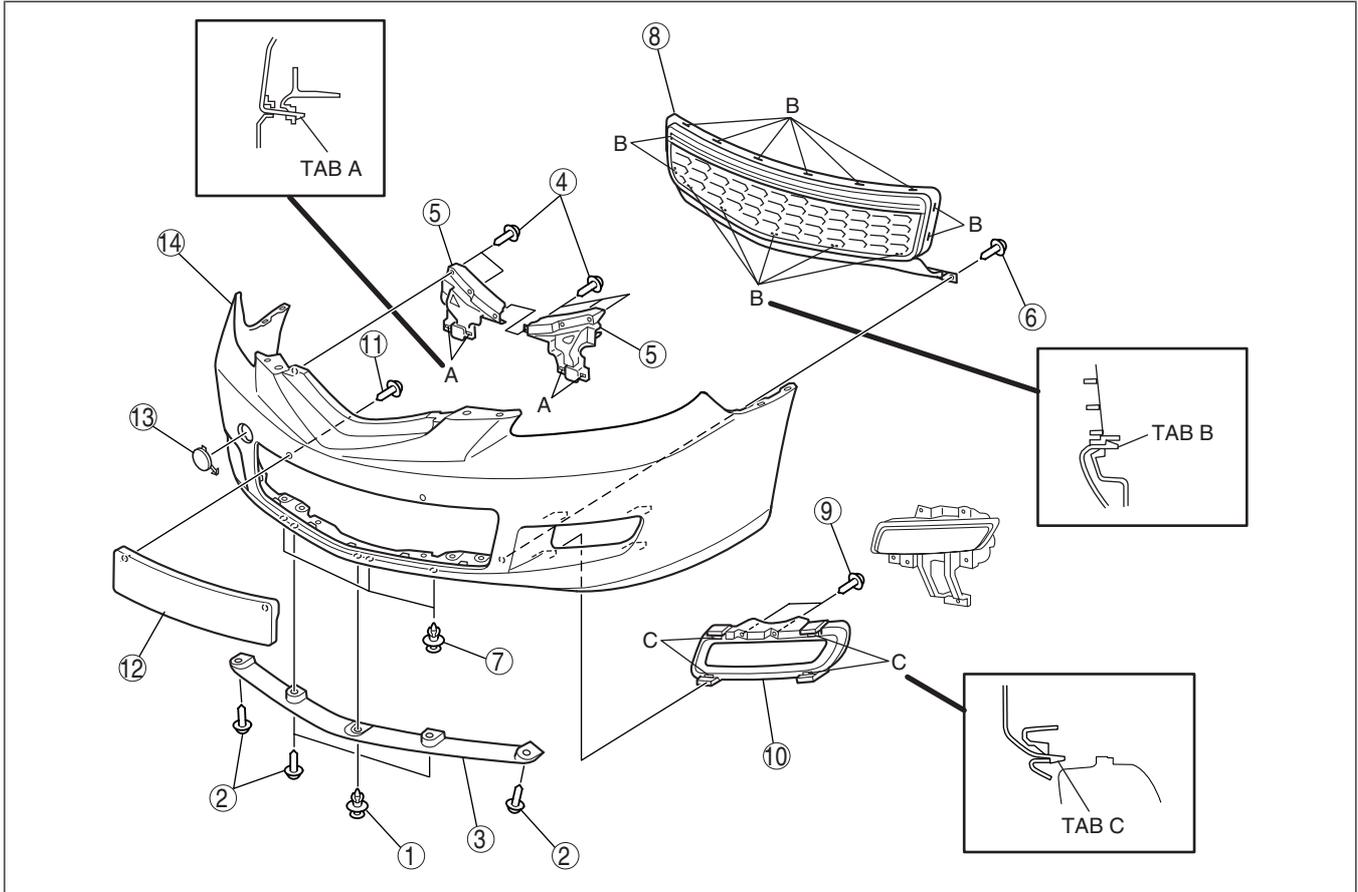

am3zzw00002288

1	Fastener A
2	Screw A
3	Airdam skirt
4	Screw B
5	Set plate
6	Screw C
7	Fastener B
8	Front bumper mesh
9	Screw D
10	Front fog light cover
11	Screw E
12	License plate holder
13	Towing hook cover
14	Front bumper fascia


3. Assemble in the reverse order of disassembly.

5HB (Mazda3 MPS)

1. Remove the following parts:

- (1) Headlight cleaner hose (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
- (2) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER NOZZLE REMOVAL.) (See HEADLIGHT CLEANER NOZZLE INSTALLATION.)
- (3) Headlight cleaner actuator (Vehicles with the headlight cleaner) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
- (4) Front fog lights (See FRONT FOG LIGHT REMOVAL/INSTALLATION.)
- (5) Radiator grille (See RADIATOR GRILLE REMOVAL/INSTALLATION.)

2. Disassemble in the order indicated in the table.

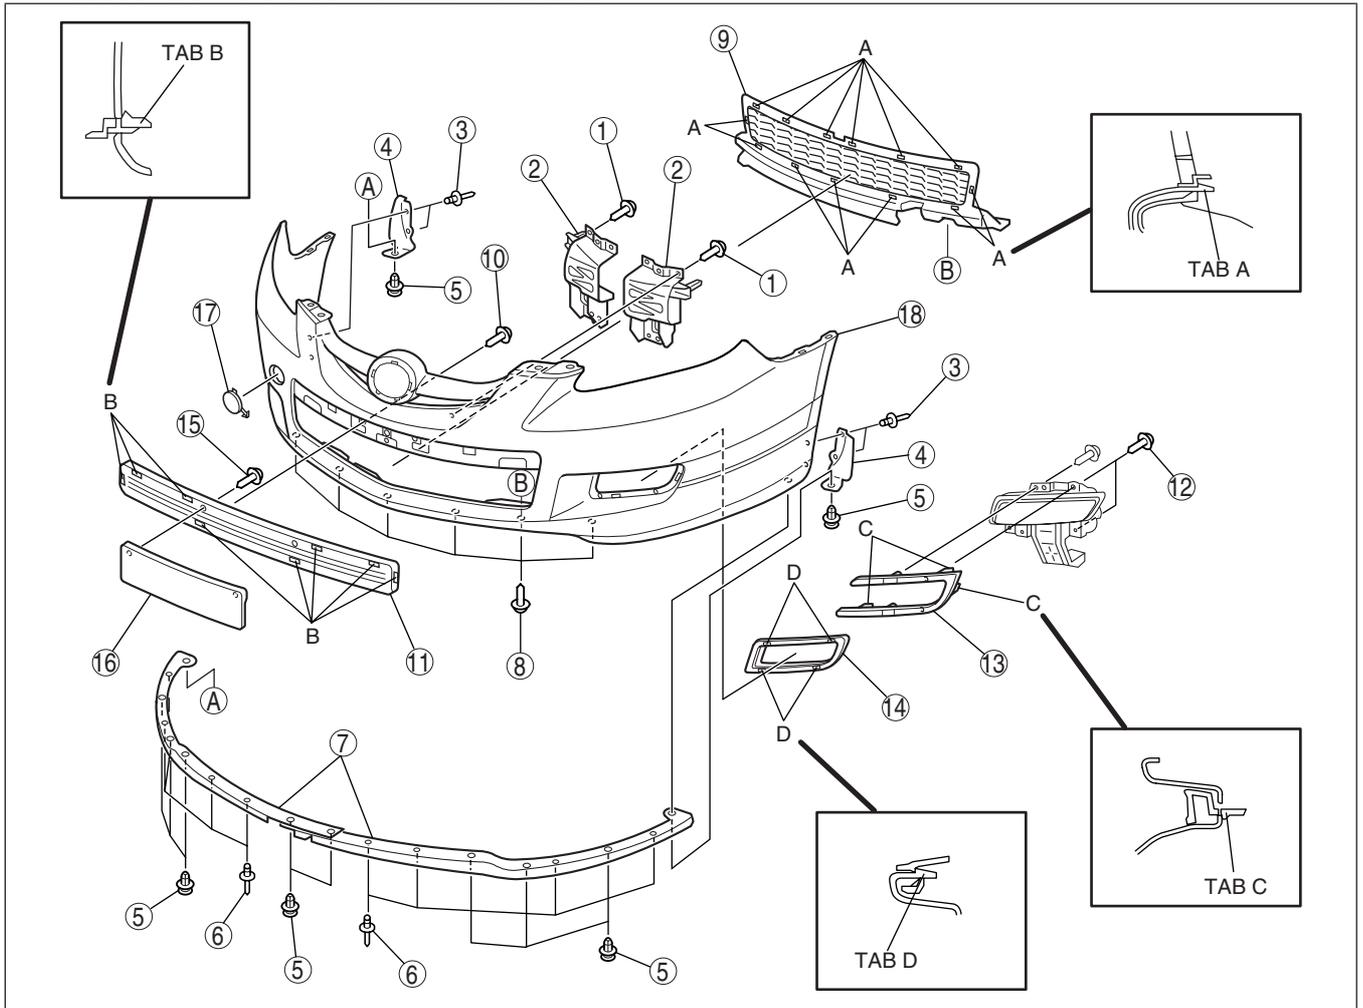

am3zzw00002991

1	Screw A
2	Set plate
3	Rivet A
4	Front bumper deflector
5	Fastener
6	Rivet B
7	Airdam skirt
8	Screw B
9	Front bumper mesh
10	Screw C
11	Front bumper protector
12	Screw D
13	Front fog light hole cover A
14	Front fog light hole cover B
15	Screw E
16	License plate holder
17	Towing hook cover
18	Front bumper fascia

3. Assemble in the reverse order of disassembly.